IDEC

Mono Lever Switches 2-Position (Assembled)



2-Position Mono Lever Switches

Description	Part Number	Description		
	HW1M-F1010-20	Maintained up and down		
	HW1M-F2020-20	Spring return up and down		
	HW1M-F1010-40	Maintained up and down		
HW1M	HW1M-F2020-40	Spring return up and down		
Standard Lever	HW1M-F0101-20	Maintained right and left		
	HW1M-F0202-20	Spring return right and left		
	HW1M-F0101-40	Maintained right and left		
	HW1M-F0202-40	Spring return right and left		
	HW1M-LF1010-20	Maintained up and down		
	HW1M-LF2020-20	Spring return up and down		
	HW1M-LF1010-40	Maintained up and down		
HW1M-L	HW1M-LF2020-40	Spring return up and down		
Interlocking Lever	HW1M-LF0101-20	Maintained right and left		
	HW1M-LF0202-20	Spring return right and left		
	HW1M-LF0101-40	Maintained right and left		
	HW1M-LF0202-40	Spring return right and left		

1. All assembled part numbers in catalog include standard (HW-F...) contacts.

Assembled units with spring-up terminals (HW-G...) can be ordered by removing an "F" from the part number (Ex. HW1B-M1F11-R becomes HW1B-M111-R).
Units with exposed screw terminals (HW-C...) must be ordered as sub-components.

4. Additional contact configurations available (up to 6 total contacts).

Circuit Diagrams 2 Position Left/Right

Circuit	Contact Mounting		Position			
Number	No.		Left	Center	Right	
20	1	HW-F10	Х	0	0	
20	2	HW-F10	0	0	Х	
40	1	HW-F10	Х	0	0	
	2	HW-F10	0	0	Х	
	3	HW-F10	Х	0	0	
	4	HW-F10	0	0	Х	

2 Position Up/Down

Circuit	Contact Mounting		Position			
Number	No.		Down	Center	Up	
20	1	HW-F10	Х	0	0	
20	2	HW-F10	0	0	Х	
40	1	HW-F10	Х	0	0	
	2	HW-F10	0	0	Х	
	3	HW-F10	Х	0	0	
	4	HW-F10	0	0	Х	

Oiltight Switches & Pilot Devices

Part Number Structure Н w 0 1 0 F 1 20 up right down left Type **Circuit Number** blank: Standard 20 or 40 (see contact arrange-Lever Action L: Interlocking ment on previous page) 1: Maintained 2: Spring 0: Blocked Mono Lever Switches 2-Position (Sub-assembled) Part Numbers Safety Lever Anti-Rotation **Contact Assembly Mounting Adaptor** Operator Lock Ring **Contact Blocks Anti-Rotation Ring** Style Contacts 1N0 1NC Appearance Part Number HW-F10 HW-F01 Standard HW9Z-RL Fingersafe HW-F10R HW-F01R (IP20) (early make) (late break) Use with notched panel cutout to prevent unit rotation. HW-G01 HW-G10 Spring-Up Termina HW-G10R HW-G01R **Operators** (early make) (late break) Description Part Number Appearance HW-C10 HW-C01 Standard Maintained Up/Down HW1M-1010 Exposed HW1M-2020 Spring return Up/Down Screw HW-C01R Terminal HW-C10R Maintained Left/Right HW1M-0101 (early make) (late break) Spring return Left/Right HW1M-0202 Interlocking Maintained Up/Down HW1M-L1010 Dummy TW-DB Block Spring return Up/Down HW1M-L2020 Maintained Left/Right HW1M-L0101 **Contact Block Mounting Adaptor** Spring return Left/Right HW1M-L0202 Style Part Number **Replacement Parts** ltem Part Number HW-CB2C Black Cap HW9Z-CPM Used to mount contact blocks to operator (first pair only). 2. DEC strongly recommends using the safety lever lock (included) to prevent heavy vibration Boot or maintenance personnel from inadvertently unlocking contacts. HW9Z-BLM (fits standard Safety Lever Lock operator only) Style Part Number HW9Z-LS

Switches & Pilot Lights

Completed Unit



Downloaded from DatasheetLib.com - datasheet search engine

IDEC

Mono Lever Switches 3- & 4-Position (Assembled)



Display Lights

Relays & Sockets

Switches & Pilot Lights

3-Position					
Description	Part Number	Description			
HW1M Standard Lever	HW1M-F0121-30	Maintained right and left, spring return down			
	HW1M-F0222-30	Spring return right, down, left			
HW1M-L Interlocking Lever	HW1M-LF0121-30	Maintained right and left, spring return down			
	HW1M-LF0222-30	Spring return right, down, left			

Circuit Diagram

Circuit	Contact Mounting		Position					
Number	No.		Down	Left	Center	Up	Right	
30	1	HW-F01	0	0	0	0	Х	
	2	HW-F01	Х	0	0	0	0	
	3	HW-F10	0	Х	0	0	0	

3. Units with exposed screw terminals (HW-C...) must be ordered as sub-components.

4. Additional contact configurations available (up to 6 total contacts).

All assembled part numbers in catalog include standard (HW-F...) contacts.
Assembled units with spring-up terminals (HW-G...) can be ordered by removing an "F" from the part number (Ex. HW1B-M1F11-R becomes HW1B-M111-R).

4-Position

Description	Part Number	Description		
HW1M Standard Lever	HW1M-F1111-22N9	Maintained all positions		
	HW1M-F1212-22N9	Maintained up and down, spring left and right		
	HW1M-2121-22N9	Spring up and down, main- tained left and right		
	HW1M-2222-22N9	Spring return all positions		
HW1M-L Interlocking Lever	HW1M-LF1111-22N9	Maintained all positions		
	HW1M-LF1212-22N9	Maintained up and down, spring left and right		
	HW1M-LF2121-22N9	Spring up and down, main- tained left and right		
	HW1M-LF2222-22N9	Spring return all positions		

Circuit Diagram

Circuit	Contact Mounting		Position					
Number	No.		Down	Left	Center	Up	Right	
22N9	1	HW-F01	0	0	0	0	Х	
	2	HW-F01	Х	0	0	0	0	
	3	HW-F10	0	Х	0	0	0	
	4	HW-F10	0	0	0	Х	0	

Timers

Oiltight Switches & Pilot Devices



USA: 800-262-IDEC

USA: 800-262-IDEC

Canada: 888-317-IDEC

 $Downloaded \ from \ \underline{DatasheetLib.com} \ - \ datasheet \ search \ engine$