

.4 hp Die Grinder

Ergo-Grip, 7° Offset Housing

Safety, Operation and Maintenance – Save This Document and Educate All Personnel

Model	RPM	Exhaust	Muffler	Insert Size
47211	3,200	Rear	Extended	1/4" & 6 mm
47212	5,000	Rear	Extended	1/4" & 6 mm
48205	25,000	Rear	Extended	1/4" & 6 mm
48207	30,000	Rear	Extended	1/4" & 6 mm
48335	25,000	Rear	Standard	1/4" & 6 mm
48337	30,000	Rear	Standard	1/4" & 6 mm



Find The Most Current Offering of Support Documents and Accessories at www.Dynabrade.com

! WARNING

Read and understand this tool manual before operating your air tool. Follow all safety rules for the protection of operating personnel as well as adjacent areas. Always operate, inspect and maintain this tool in accordance with the American National Standards Institute (ANSI) Safety Code for Portable Air Tools – B186.1. For additional safety information, refer to Safety Requirements for the Use, Care and Protection of Abrasive Wheels – ANSI B7.1, Code of Federal Regulation – CFR 29 Part 1910, European Committee for Standards (EN) Hand Held Non-Electric Power Tools – Safety Requirements and applicable State and Local Regulations.



Read and understand tool manual before work starts to reduce risk of injury to operator, visitors, and tool.



Eye protection must be worn at all times, eye protection to conform to ANSI Z87.1.



Ear protection to be worn when exposure to sound, exceeds the limits of applicable Federal, State or local statutes, ordinances and/or regulations.



Practice safety requirements. Work alert, have proper attire, and do not operate tools under the influence of alcohol or drugs.



Respiratory protection to be used when exposed to contaminants that exceed the applicable threshold limit values required by law.



Air line hazard, pressurized supply lines and flexible hoses can cause serious injury. Do not use damaged, frayed or deteriorated air hoses and fittings.

Some dust created by sanding, grinding, drilling, and other construction activities contain chemicals known to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are:

- Lead from lead-based paints
- Crystalline silica from bricks and cement and other masonry products
- Arsenic and chromium from chemically treated lumber

Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals: work in a well ventilated area, and work with approved safety equipment, such as those dust masks that are specially designed to filter out microscopic particles.

SAFETY INSTRUCTIONS



Carefully Read and Understand the General and Die Grinder sections found in Tool Safety and Operating Guidelines (PN00001676) Before Handling or Using Tool.

Carefully Read all instructions before operating or servicing any Dynabrade® Abrasive Power Tool. Products offered by Dynabrade are not to be modified, converted or otherwise altered from the original design.

Tool Intent: .4 hp Die Grinder is ideal for deburring, deflashing, surface preparation, cleaning and finishing using proper abrasive stones, abrasive mounted wheels, molded abrasives and carbide burrs. Intended for use with abrasives less than 2" (50 mm) diameter.

DO NOT USE Tool for Anything Other Than Its Intended Applications.

Training: Proper care, maintenance, and storage of your air tool will maximize tools performance and reduce chance for accident.

Employer's Responsibility: Provide operators with safety instructions and training for safe use of tools and accessories.

Report to Your Supervisor any Condition of the Tool, Accessories or Operation you Consider Unsafe.

MAINTENANCE INSTRUCTIONS

Important: To keep tool safe, a Preventative Maintenance Program is recommended. The program should include inspection of the tool and all related accessories and consumables, including air lines, pressure regulators, filters, oilers, etc. refer to CAGI B186.1 for additional maintenance information. If accessory or tool breakage occurs, investigate failure to determine the cause and correct before issuing tool for work. Use the following schedule as a starting point in developing a Preventative Maintenance Program. If tool does not operate properly (RPM, Vibration, Start/Stop) after these scheduled checks or at any time, the tool must be repaired and corrected before returning tool to use.

INSTALLATION

- To ensure long life and dependable service, use a Closed Loop Air System and Filter-Regulator-Lubricator as diagramed below.
- Each tool should have its own dedicated hose connected to an air supply manifold. Quick disconnects should be installed at the manifold in an effort to reduce contamination into the tool.
- It is strongly recommended that all Dynabrade rotary vane air tools be used with a Filter-Regulator-Lubricator to minimize the possibility of misuse due to unclean air, wet air or insufficient lubrication. Dynabrade recommends the following: **10681** Air Line Filter-Regulator-Lubricator — Provides accurate air pressure regulation, two-stage filtration of water contaminants and micro-mist lubrication of pneumatic components.
- Dynabrade recommends one drop of air lube per minute for each 20 SCFM (example: if the tool specification states 40 SCFM, set the drip rate on the filter-lubricator to 2 drops per minute) Dynabrade Air Lube (P/N **95842**: 1pt/473ml) is recommended.

MAINTENANCE SCHEDULE

Daily (every 8 hours):

- Inspect tool and accessories for damage or broken parts. Replace items as necessary to ensure proper operation and safety.
- Lubricate motor as recommended. Use Dynabrade Air Lube (P/N **95842**: 1pt/473ml) 10W/NR. (1 Drop per minute of air lube per 20 SCFM.)
- Check air line pressure with a gage. (MAX. 90 PSIG or 6.2 Bar operating pressure at the air inlet of the tool.)
- Right angled gear and wick system through gear case grease fitting with 3 plunges of gear oil (P/N **95848**) and grease gun (P/N **95541**). (Prime grease gun prior to greasing.)
- Check tool for proper operation: If operating improperly or demonstrates unusual vibration, the tool must be serviced and problem corrected before further use.

Every 20 Hours or Once a Week Which Ever Comes First:

- Check free speed of tool without the abrasive accessory mounted. Measure RPM (speed) with tachometer and with air pressure set at 90 PSIG while the tool is running. If a governed tool is operating at a higher speed than the RPM marked on the tool housing, the tool must be serviced and corrected before use. A non-governed tool may exceed the RPM marked on the tool by 10% when operated at free speed with no accessories.
- If tool is running fast look for worn, damaged or missing governors, air control rings and silencers. Special care must be taken when servicing

governors and speed control devices. Injection molded governor assemblies are non-serviceable and must be replaced.

- If tool is running slow look for clogged inlet screen, air stream, silencer(s) or a malfunctioning governor (see concerns for servicing governors). Service as required.

Every 50 Hours:

- Lubricate planetary gears through gear case grease fitting with 3 plunges of grease (P/N **95542**) and grease gun (P/N **95541**). (Prime grease gun prior to greasing.)

REPAIR

- Use only genuine Dynabrade replacement parts to ensure quality. To order replacement parts, specify Model#, Serial# and RPM of your air tool.
- Mineral spirits are recommended when cleaning the tool and parts. Do not clean tool or parts with any solvents or oils containing acids, esters, ketones, chlorinated hydrocarbons or nitro carbons.
- DO NOT clean or maintain tools with chemicals that have a low flash point (example: WD-40®).
- Motor Tune-Up Kit are available (when applicable) which includes high wear and medium wear motor parts.
- Air tool markings must be kept legible at all times, if not, reorder housing and replace. User is responsible for maintaining specification information.
- After maintenance is performed on tool, add a few drops of Dynabrade Air Lube (P/N **95842**) to the tool inlet and start the tool a few times to lubricate air motor. Verify RPM (per 20 hr maintenance schedule), vibration and operation.

HANDLING & STORAGE

- Use of tool rests, hangers and/or balancers is recommended.
- Protect tool inlet from debris (see Notice).
- DO NOT carry tool by air hose or near the tool throttle lever.
- Store accessories in protective racks or compartments to prevent damage.
- Follow the handling instructions outlined in the operating instructions when carrying the tool and when changing accessories.
- Protect accessories from exposure to water, solvents, high humidity, freezing temperature and extreme temperature changes.

END OF USE/DISPOSAL



When tool has reached its end of useful service, disassemble tool into its primary components (i.e. steel, aluminum and plastic part) and recycle or discard per local, state and/or federal regulations as to not harm the environment.

NOTICE

All Dynabrade motors use the highest quality parts and metals available and are machined to exacting tolerances. The failure of quality pneumatic motors can most often be traced to an unclean air supply or the lack of lubrication. Air pressure easily forces dirt or water contained in the air supply into motor bearings causing early failure. It often scores the cylinder walls and the rotor blades resulting in limited efficiency and power. Our warranty obligation is contingent upon proper use of our tools and cannot apply to equipment which has been subjected to misuse such as unclean air, wet air or a lack of lubrication during the use of this tool.

AIR SYSTEM

Closed Loop Pipe System, Sloped in Direction of Air Flow

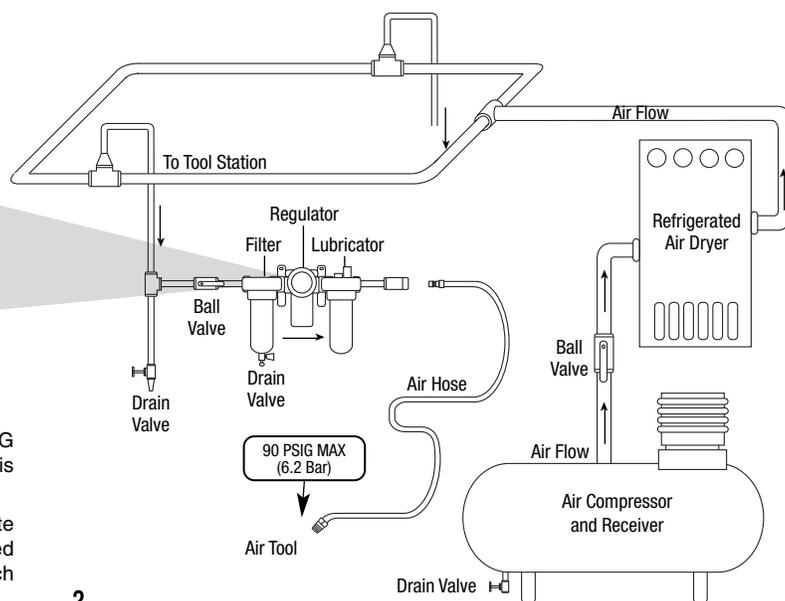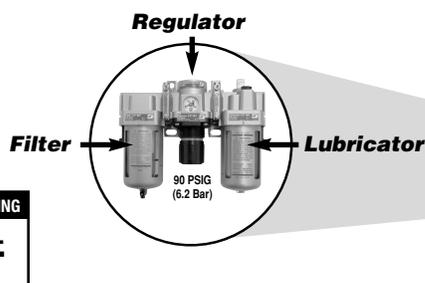


- Dynabrade Air Power Tools are designed to operate at 90 PSIG (6.2 Bar) maximum air pressure at the tool inlet, when the tool is running. Use recommended regulator to control air pressure.
- Ideally the air supply should be free from moisture. To facilitate removing moisture from air supply, the installation of a refrigerated air dryer after the compressor and the use of drain valves at each tool station is recommended.

Models
47211, 47212, 48205,
48207, 48335, 48337

.4 hp Die Grinder Complete Assembly


Index Key

No.	Part #	Description
1	Collet Cap	
50012		3,200 & 5,000 RPM
01484		25,000 & 30,000 RPM
2	Collet Insert - 1/4"	
50013		3,200 & 5,000 RPM
01485		25,000 & 30,000 RPM
	Collet Insert - 6 mm	
50016		3,200 & 5,000 RPM
01497		25,000 & 30,000 RPM
3	Collet Body	
50011		3,200 & 5,000 RPM
01435		25,000 & 30,000 RPM
4	50782	Adapter
5	50781	Cover
6	54552	Bearing (2)
7	54468	Ring Gear
8	50787	Planetary Carrier
9	Planetary Gear	
54519		3,200 RPM (2)
06213		5,000 RPM (2)
10	54472	Pin (2)
11	50778	Spacer
12	01041	Lube Fitting
13	50784	Set Screw
14	50776	Housing (3,200 & 5,000 RPM)
01546		Housing (25K & 30K RPM)
15	01580	Felt Seal
16	01560	Cover
17	02649	Bearing
18	54543	Shim - .001" (As Required)
19	54544	Shim - .002" (As Required)
20	54551	Shim - .003" (As Required)
21	01478	Front Bearing Plate
22	50767	Pin (2)
23	01479	Spacer
24	01480	Vane Set (4/Pkg.)
25	Rotor	
01475		25,000 & 30,000 RPM Mdl.
54554		3,200 RPM Model
54553		5,000 RPM Model
26	01476	Cylinder
27	02673	Rear Bearing Plate
28	02696	Bearing
29	95523	O-Ring
30	95855	Screw (25,000 RPM Models)
31	45309	Throttle Body Assembly
31.1	01548	Gasket
31.2	01437	Plug
32	96077	O-Ring
33	01558	Collar
34	45315	Throttle Bushing
35	97045	Pin
36	45263	Safety Throttle Lever
37	97060	Pin
38	Exterior Housing (Laser Etched)	
45207		Model - 47211
45208		Model - 47212
45222		Model - 48205
45223		Model - 48207
45227		Model - 48335
45228		Model - 48337
39	45310	Seal
40	58365	Tip Valve
41	01468	Spring
42	01564	Air Control Ring
43	95711	Retaining Ring
44	01486	Felt Silencer (4)
45	96065	O-Ring
46	01446	Air Deflector
47	95620	Retaining Ring
48	01578	Inlet Adapter Assembly
49	95438	O-Ring
50	94521	Muffler Base
51	94524	Sintered Bronze Muffler
52	94525	Felt Muffler
53	94522	Muffler Cap
54	95375	O-Ring
55	94526	Spacer
56	94523	Inlet Adapter Assembly
57	94535	Standard Muffler Assembly
58	94520	Extended Muffler Assembly

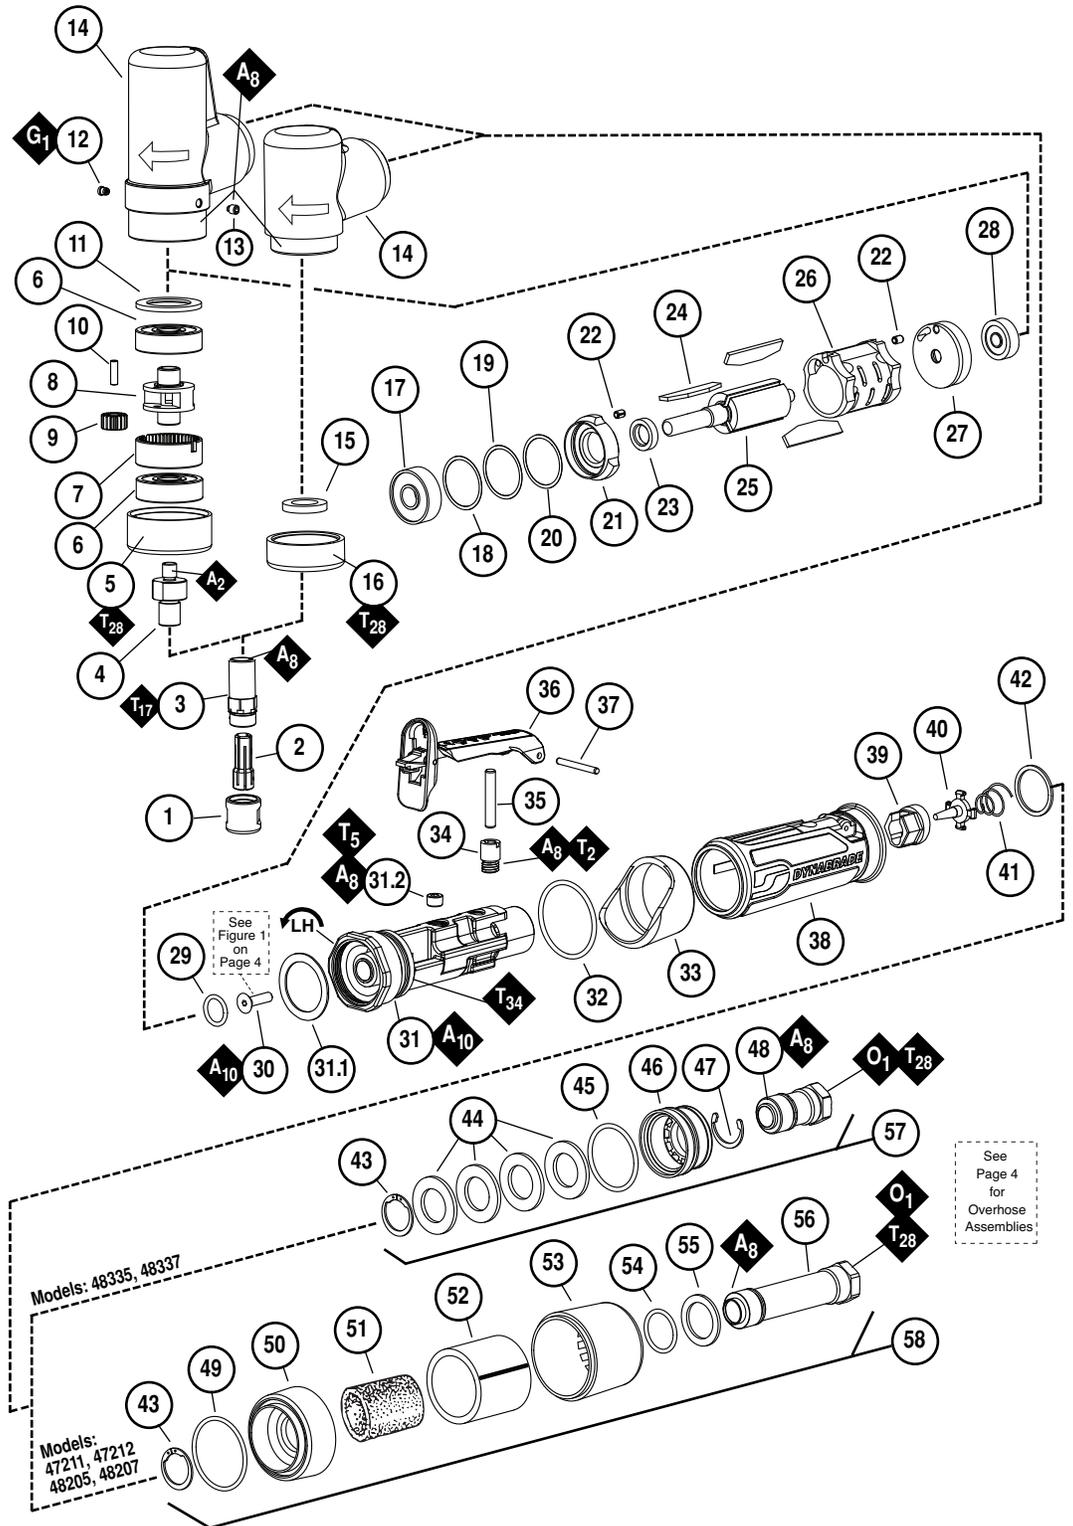

Models: 48335, 48337

Models:
 47211, 47212
 48205, 48207



96076 12 mm Wrench
 95262 14 mm Wrench
 95281 19 mm Wrench

KEY	
O	Oil: O ₁ = Air Lube
A	Adhesive: A ₂ = Loctite #271 A ₈ = Loctite #567 A ₁₀ = Loctite #243
T	Torque: N·m x 8.85 = In. - lbs.
G	Grease: G ₁ = Lubriplate 630AA
Always follow adhesive manufacturers cleaning and priming recommendations.	

LIFETIME WARRANTY

To validate Dynabrade Lifetime Warranty, you must register each tool at: www.dynabrade.com. Registration of each tool at website is required. Dynabrade will not honor Lifetime Warranty on unregistered tools. Please view the entire Lifetime Warranty Policy at : www.dynabrade.com.



MACHINE SPECIFICATIONS

Model	Speed	Power	Sound	Air Consumption	Collet Size	Weight	Length	Height
47211	3,200 RPM	.4 hp (298 W)	73 db(A)	23 SCFM 651 (LPM)	1/4" & 6 mm	1.7 lb. (.78 kg)	9" (228 mm)	5.6" (143 mm)
47212	5,000 RPM	.4 hp (298 W)	75 db(A)	23 SCFM 651 (LPM)	1/4" & 6 mm	1.7 lb. (.78 kg)	9" (228 mm)	5.6" (143 mm)
48205	25,000 RPM	.4 hp (298 W)	71 db(A)	23 SCFM 651 (LPM)	1/4" & 6 mm	1.3 lb. (.57 kg)	8.9" (225 mm)	3.8" (97 mm)
48207	30,000 RPM	.4 hp (298 W)	72 db(A)	23 SCFM 651 (LPM)	1/4" & 6 mm	1.3 lb. (.57 kg)	8.9" (225 mm)	3.8" (97 mm)
48335	25,000 RPM	.4 hp (298 W)	73 db(A)	23 SCFM 651 (LPM)	1/4" & 6 mm	1 lb. (.47 kg)	7.3" (186 mm)	3.8" (97 mm)
48337	30,000 RPM	.4 hp (298 W)	74 db(A)	23 SCFM 651 (LPM)	1/4" & 6 mm	1 lb. (.47 kg)	7.3" (186 mm)	3.8" (97 mm)

Additional Specifications: Air Inlet Thread 1/4" NPT • Hose I.D. 1/4" (6 mm)

Sound Level is the pressure measurement according to the method outlined in ISO regulation ISO-15744

OPTIONAL ACCESSORIES



Motor Tune-Up Kit

- Includes assorted parts to help maintain and repair motor.

Part No. 96541



Dynabrade Air Lube

- Formulated for pneumatic equipment.
- Absorbs up to 10% of its weight in water.
- Prevents rust and formation of sludge.
- Keeps pneumatic tools operating longer with greater power and less down time.

Part No. 5842: 1 pt. (473 ml)

Part No. 5843: 1 gal. (3.8 L)



Overhose Assembly

- Redirects exhaust away from operator.


Part No. 94994

- For use with standard exhaust models only.

Part No. 94995

- For use with extended exhaust models only.


FIGURE 1

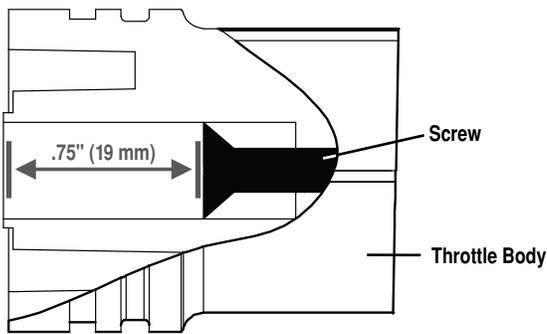

MODELS: 48205 & 48335

ADJUST SCREW (PART NO. 95855) DEPTH TO .75" (19 MM) TO ATTAIN PROPER SPEED OF 25,000 RPM

SPECIAL REPAIR TOOLS



Socket

- 3/8" Drive
- For use on throttle body.


Part No. 96393



Crowfoot Wrench

- 3/8" Drive
- 34 mm
- Use on throttle body, housing core & lock nuts.


Part No. 96460

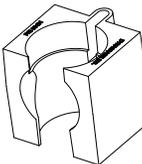

Repair Collar

- Used to protect right angle and 7° offset housings when placed in a vise.

Part No. 96461

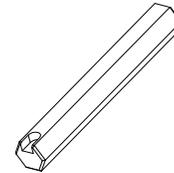

Hex Key Wrench

- 12 mm hex
- Use in housing core or air inlet.

Part No. 96399

REFERENCE CONTACT INFORMATION

American National Standards Institute (ANSI)

25 West 43 Rd St., 14th Floor • New York, NY 10036 • Tel: 1 (202) 293-8020

Compressed Air & Gas Institute

1300 Sumner Ave. • Cleveland, OH 44115-2851

Tel: 1 (216) 241-7333 • Fax: (216) 241-0105

European Committee for Standardization

Rue de Stassart 36 • B - 1050 Brussels, Belgium

International Organization of Standards

Case postale 56 • CH-1211 Geneva 20

Tel: + 41 22 749 01 11 • Fax: + 41 22 749 09 47

Government Printing Office

Superintendent of Documents • Attn: New Orders

P.O. Box 371954 • Pittsburgh, PA 15250-7954

Tel: 1 (202) 512-1803

DYNABRADE, INC.

8989 Sheridan Drive • Clarence, NY 14031-1419 • Phone: (716) 631-0100 • Fax: 716-631-2073 • International Fax: 716-631-2524

©DYNABRADE, INC., 2012

PRINTED IN USA

www.dynabrade.com

PD12.05Rev2_11/15

